

Installation **Manual**

LED Sky Ceilings & LED Wall Panels



ASPIRE®



INSTALLATION **MANUAL**

LED Sky Ceilings & LED Wall Panels

Contents

LED Sky Ceiling PanelSuspended Ceiling Installation

(15mm & 24mm)

LED Sky Ceiling Panel

Surface Mount Installation

LED Wall Panel

Surface Mount Installation

LED Sky Ceiling Panel

Extra Info: Recessed Mounting

MRI Installations

Terms of Use

Section 1

Pages 3-6

Section 2

Pages 7-10

Section 3

Pages 11-14

Section 4

Page 15

Section 5

Page 16

Section 6


Page 17






Suspended Ceiling Installation

(15mm & 24mm)

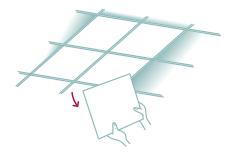

Remove current ceiling panels.

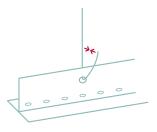

Squeeze grid hangers together if necessary to create space for the panels.



Create a dust-free environment and unbox the panels.




Wear gloves (provided).



Suspended Ceiling Installation

(15mm & 24mm)

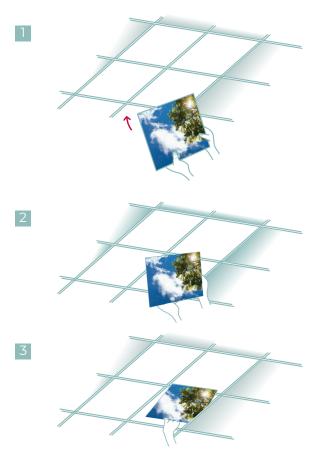

Refer to the image layout plan for proper placement. Direction arrows and numbers are placed on the back of each panel and on the corresponding layout plan.


Avoid touching the panel on the image and in the middle. Only touch the panel on the aluminium frame to avoid fingerprints and light-gaps.

<u>Caution:</u> The suspended ceiling grid should have sufficient hanging supports to cater for the weight of your combined LED Sky Ceiling array.

All panels are also supplied with additional independent safety cables that are to be fixed to the structure above the grid, acting as a fail-safe.



Suspended Ceiling Installation (15mm & 24mm)

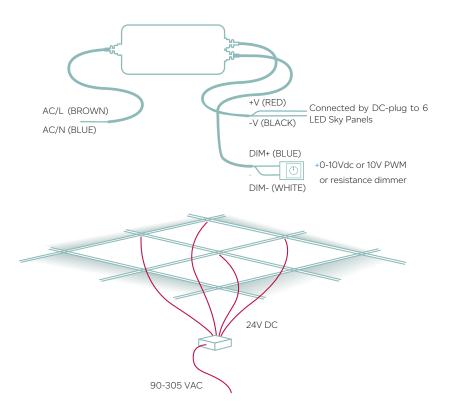


All LED Sky Ceiling and LED Wall panels are supplied as on/off (non-dimmable) as standard. We can also supply various types of dimmable LED drivers (DALI, Push-Dim, 0-10v etc.).

Connect the push fit DC-plugs on the back of the panel to the plugs on the LED Driver. Do not pull the cables.

Connect the LED Driver to the power source and place in a dry, safe place.

<u>Caution:</u> LED Drivers MUST be installed <u>OUTSIDE</u> of the magnetic field in an MRI suite. Check the 'Extra Information - MRI' (page 15.)



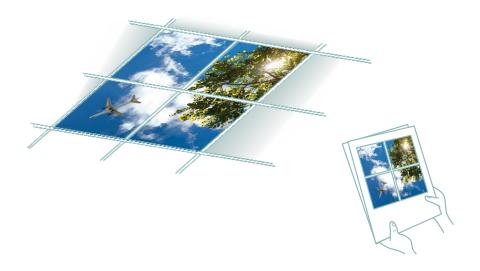

Final Checklist

Do all the panels sit evenly in the grid?

Hanger wire can force a panel to sit off center. If so, re-attach the wire.


If grid is not installed square, The panels will sit unevenly in the opening. If so, adjust grid so it is square.

Is the image evenly lit?

If one or more panels are dark, one or more panels are not working. Re-check wiring connection.

Does the image match the layout image?


Are the tiles in the correct position and orientation?

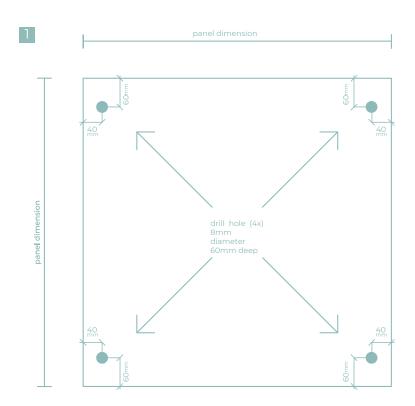


Drill the holes according to this drilling instruction.
 
<u>Caution:</u> Make sure your surface and materials are strong enough to support the weight of the panel.





Attach safety cord to the screw

 

Turn the plugs and screws into the ceiling




Attach safety cord to the panel.


5



Connect the LED Driver.

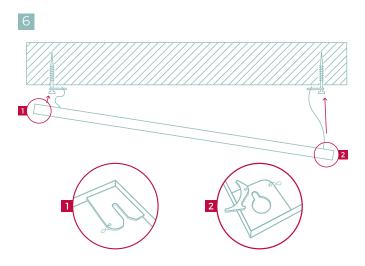


Slide the panel on to the screws.

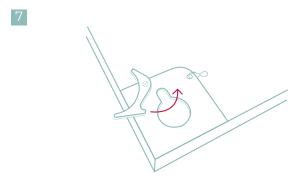

Lock the panel.

aspireinside.com Page 10 of 18 +44(0)20 3011 0759



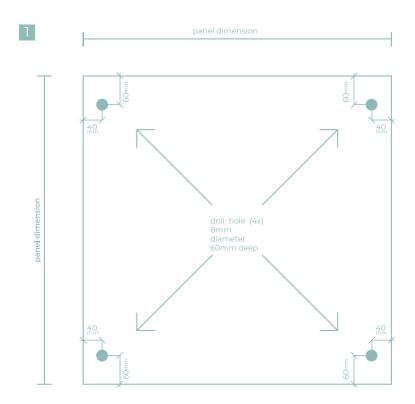

Drill the holes according to this drilling instruction.

 $\underline{\text{Caution:}}$ Make sure your surface and materials are strong enough to support the weight of the panel.

aspireinside.com Page 11 of 18 +44(0)20 3011 0759






Attach safety cord to the screw





Turn the plugs and screws into the wall



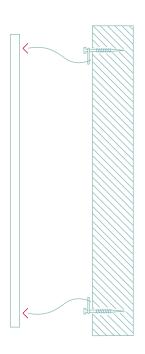


Attach safety cord to the panel.







Connect the LED driver.

Installation: Surface Mount LED Wall Panel

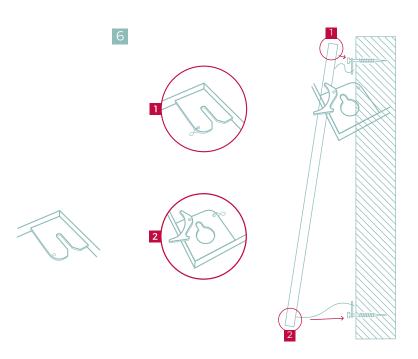


Slide the panel on to the screws.

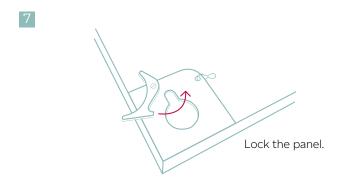

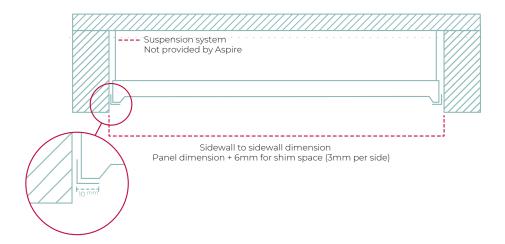

Recessed installations are as per the previous steps. However, as there is no grid system, a profile needs to be created for the panels. Please consult a skilled installer for the right materials and construction.

<u>Caution:</u> Make sure your surface and materials are strong enough to support the weight of the panel.

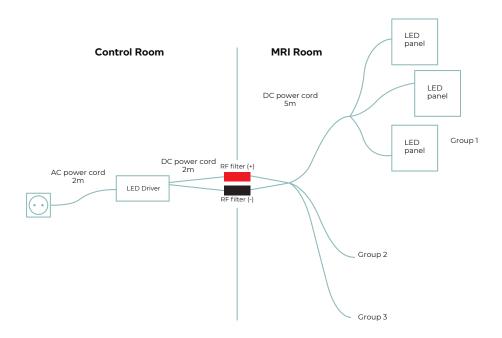

<u>Caution</u>; LED Drivers MUST be installed <u>OUTSIDE</u> of the magnetic field in an MRI suite. Use only non-ferrous equipment.

The use of RF-Filters is advised (not included, to be provided by others).

6 Terms of Use

- Do not pull the cables with force.
- Only use the supplied power adapter/s. Failure to follow this instruction could result in permanent damage to the LED Panel/s.
- The panels are suitable for internal use only (IP20).
- Keep the LED Panels away from areas of high humidity.
- Do not locate the panel in areas subject to extreme temperatures, max. +35 Degrees Cel.
- LED bulbs have life expectancy of more than 50.000 hours subject to the unit being switched on for a maximum of 12 hours per day and kept out of direct sunlight. After this time brightness may reduce up to 30%.
- The panel must be installed by a competent, trained person, following the instructions provided.
- Damage caused by failure to follow the instructions provided, modifications to the electrical components or incorrect installation procedures will void the 2 year warranty.



Installation **MANUAL**

LED Sky Ceilings & LED Wall Panels

> **ENHANCING PATIENT EXPERIENCE**

Office 1, ITEC Business Park, 53 Armagh Rd, Newry BT35 6DN, N. Ireland

+44(0)20 3011 0759 sales@aspireinside.com

aspireinside.com









